



## Proline Insert Hood Models

**INCLUDES:**

CL, Hurricane, INS & UMOD

**INSTALL MANUAL**

---

## Table of Contents

---

Safety Information . . . . .	2
Warranty . . . . .	3
Pre-Installation. . . . .	4
Pre-Installation & Inspection . . . . .	6
Ducting . . . . .	6
Hood Installation . . . . .	7
Grease Tray Installation. . . . .	8
Baffle Filter Installation . . . . .	9
Final Steps. . . . .	9
Maintenance . . . . .	10
Latest Installation Manual . . . . .	10

## Safety Information

---

**Ask a qualified professional such as a licensed general contractor to install your range hood. Electrical wiring must be installed, insulated, and grounded by a licensed electrician familiar with your local codes and regulations. If you don't have this background, do not install the hood yourself. Poor installation or electrical work may result in an injury.**

- Range hoods can be heavy to mount, so always ask a friend for help.
- Wear protective gloves when handling the range hood and its filters. The edges can be sharp.
- For residential use only. Do not install your hood in a restaurant or other commercial environment. Our hoods do not abide by the rules and regulations for commercial use.
- Do not use your hood to vent hazardous or explosive materials and vapors. This is incredibly dangerous and may result in serious injury.
- When cleaning the unit, make sure the power is turned off.
- When troubleshooting or replacing the touch panel, circuit board, or other electrical components, turn power to the range hood off.
- Check your local codes and regulations to see what type of ductwork is required. Some codes require rigid metal ductwork. Do not use flex duct for your range hood, as it can wear down quickly. Air may escape into your walls or attic.

- Never vent your ducted hood into an attic, joists in your ceiling, or a soffit. Always vent the hood to the outside to keep grease, smoke, and unwanted contaminants out of your home.
- Avoid electrical wiring when drilling a hole into your wall or ceiling for ductwork.
- Clean or replace old ductwork with new rigid ductwork to prevent potential grease fires and increase the efficiency of your range hood.
- Seal all joints in your duct system with aluminum tape to prevent air from escaping in your walls or attic.
- Check your local regulations to determine if you need make-up air. When a range hood vents air out of your home, that air has to be replaced. If you operate a powerful range hood (600+ CFM) in a small kitchen, you may need make-up air. We do not sell make-up air kits.
- Clean your range hood filters, grease trays, and the range hood every few weeks. Heavy grease buildup shortens the life of your hood and it may lead to a grease fire.
- All Proline range hoods are ETL certified. They meet all industry standards and regulations to ensure your safety.
- Use the high setting on your range hood to vent heavy smoke or heat in case of emergency. Otherwise, use the lower settings to prolong the life of your hood.
- While your range hood is on, do not leave your cooking area unattended.

## Safety Information (continued)

- When cooking with oils, do not heat them past their smoke point. If oil starts smoking, turn off the burner and discard any food that came into contact with it. Do not use extra virgin olive oil in high heat, since it starts to smoke at around 300° Fahrenheit.

### In the event of a grease fire:

- Smother the flames with a large lid, pan, or baking sheet. If the fire is small, smother it with baking soda or salt. For larger fires, use a fire extinguisher.
- Turn off all burners.

- Do not touch a flaming pan. This may result in serious burns.
- Keep all flammable materials away from the grease fire. This may include nail polish remover, flour, rubbing alcohol, and hand sanitizer, among other household items.
- Do not pour water on a grease fire. Water will spread the oil around, making the fire more potent and dangerous. Wet towels and rags will also spread the oil, so avoid using these as well.
- If you cannot contain the fire, call the fire department immediately.

## Warranty Information and Return Policy

### Proline 3-Year Warranty

All of our range hoods have a three-year warranty. For the first year, we cover parts and labor. This doesn't include installation. For the second and third years of your warranty, we'll cover parts only. This warranty covers every part of your range hood except the following:

- Range hood filters
- Range hood lights
- Any dents, dings, scratches, or other damage to the outside of the hood

If you're outside of the warranty and your hood is not working properly, call us at (801) 973-3959 and we'll help you resolve your issue. We can typically help fix your Proline range hood at a reasonable price so you don't have to replace the entire range hood.

### Proline Return Policy

**For the most accurate return policy, please scan the QR code at the back of this manual or visit our website. Printed materials may occasionally be outdated or incomplete. Always refer to our online support section for the latest information.**

We want you to be completely satisfied with your purchase. Please read the following carefully before installation or discarding packaging:

#### 1. Damaged or Defective? Let Us Know Within 5 Days

If your hood arrives damaged or defective, you must notify us within 5 business days of delivery. We'll work with you

to repair, replace, or fully refund the item at no cost to you. Claims made after 5 business days will not be accepted.

#### 2. Changed Your Mind? Return Window Up to 30 Days

If your hood is not damaged but you still want to return it, you may request a return within 30 days of delivery. If your return is approved, a 20% restocking fee will apply.

#### 3. No Returns After 30 Days

We do not accept returns under any circumstance beyond 30 days from delivery.

#### 4. Installed Products Cannot Be Returned

Items that have been installed or show any signs of installation are not eligible for return.

#### 5. Keep the Packaging

All returns must include the original packaging. If any part of the packaging is missing or discarded, the return will be denied.

#### 6. Photo Documentation Required

To process a return request, photo documentation is required:

- If the box has been **opened**, you must provide **6 clear photos** showing all sides of the range hood, including the top and bottom, *outside* of the packaging.
- If the box is **unopened**, please provide **photos showing the factory seal on the tape has not been broken**.


#### CHIMNEYS AND CHIMNEY EXTENSIONS ARE NOT RETURNABLE.

Ensure the product is uninstalled, repackaged in the original box with all accessories, and in new condition.


# Pre-Installation

---


## Tools Required




Safety Goggles




Safety Gloves




Utility Knife

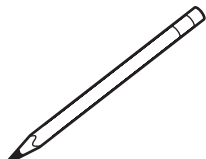


Pencil

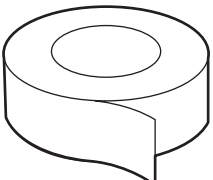


Tape

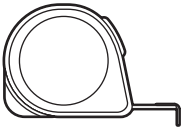


Measuring Tape




Phillips Screwdriver



 Flathead Screwdriver














Electric Drill




Level

## Pre-Installation (continued)
 
### Parts Supplied

DESCRIPTION	IMAGE	QUANTITY
Insert Hood		1
Blower Pack Single or Dual (if applicable)*		1
Construction Mounting Screws (1-1/2")		4
Construction Mounting Washers		4
Ducting Transition Piece		1
Round Head Screws for Ducting Transition Piece		4
Baffle Filter Spacer (if applicable)		Varies by size
Baffle Filters		Varies by size
Baffle Filter Handles or Knobs (if applicable)		Varies by size
Baffle Filter Handle Screws (if applicable)		Varies by size
Grease Tray (if applicable)		1

\* The PLJL.INS, PLGL CL, and PLGL UMOD are the only insert models that ship with a separate blower pack. For installation, scan the QR code to view the video guide.

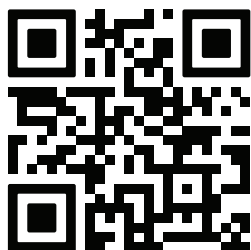

## Pre-Installation & Inspection

### Step 1: Unpack and Inspect

If you discover damage or missing parts, stop and contact us immediately at (801) 973-3959.

As you unpack your hood, remove any protective film from the filters or stainless steel surfaces before installation.


## Ducting

### 1. Plan Your Ductwork

- Install your ductwork in the shortest unobstructed path to the outside of your home.
- Select a path that avoids studs, electrical wires, and other obstacles in your walls.

### 2. Venting Options

The best option is to vent vertically through the roof if possible, since hot air rises. If vertical venting is not possible, vent through a side wall. See the diagram below.

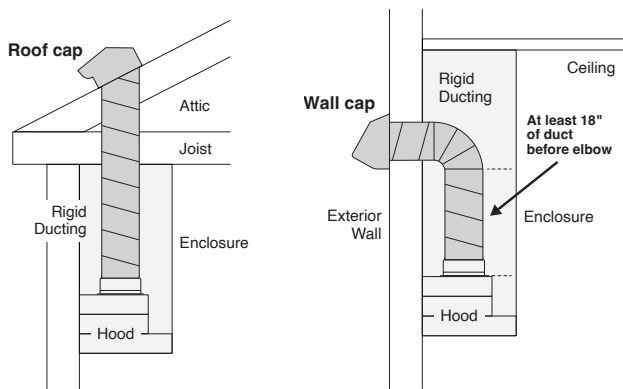

### 3. Best Practices When Ducting Your Range Hood

**Before cutting into walls or ceilings, consult a contractor if you are unsure what is inside.**

- Include at least 18" of straight duct from the transition before the first elbow.
- Maintain at least 18" of straight duct between additional elbows.
- Use rigid galvanized steel or metal HVAC ducting only.
- Do not terminate ducting in an attic or enclosed area.
- Do not use 4" (10.2 cm) laundry wall caps or plastic flexible duct.

- Do not exceed 30' of total ductwork length.
- Do not reduce the duct size from the hood outlet diameter.
- Round duct is more efficient than rectangular duct.
- Subtract 5' of effective duct length for each elbow.
- Use no more than two elbows total; the fewer, the better.

### 4. Cut the Opening

- Once you've chosen a venting route, cut a hole 1–2 inches larger than your duct diameter in the ceiling or wall.
- Use the duct transition piece as a template for marking your opening.

### 5. Thread the Ductwork


- Thread the duct from the exterior toward the hood location.
- Use an attic or basement if available, or cut access points in walls/ceilings as needed.

# Hood Installation


## Step 1: Plan Your Installation

Your installation sequence depends on your cabinet or enclosure design. Cabinet type determines when ductwork is connected — either before or after the hood is mounted:



### Fully Enclosed Cabinets (No Top Access)

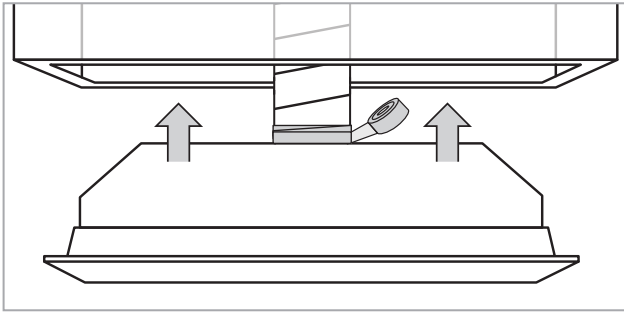

- ☐ Connect ductwork to the hood before lifting it into place, since access will be limited once mounted.
- ☐ Seal all connections with aluminum HVAC tape.

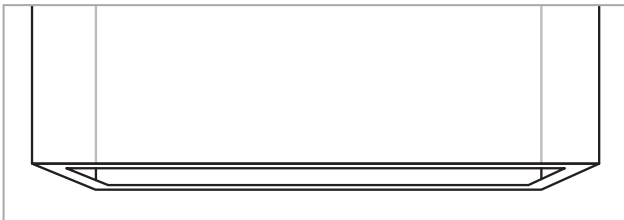

### Open-Frame or Partial Cabinets (Top Access Available):

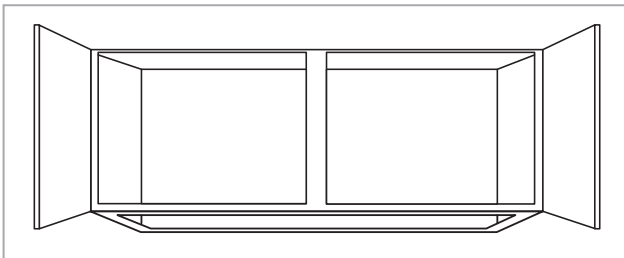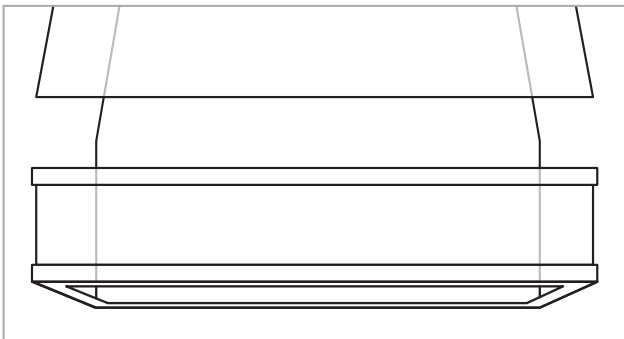


- ☐ Lift the hood into place first.
- ☐ Once mounted, connect and seal ductwork from above.
- ☐ Consult a professional if you're unsure which method applies to your project.

## Step 2: Securing the Hood

The method of attachment varies by model:


### INS, UMOD, and CL Inserts

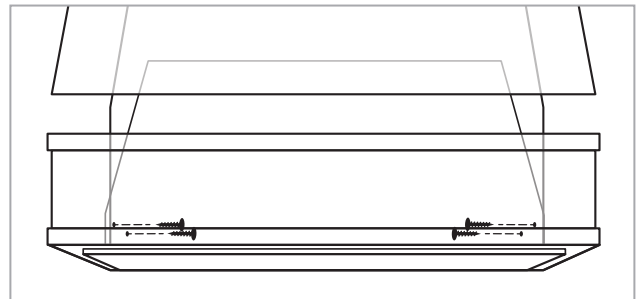

- ☐ Secure the hood from inside the hood cavity.
- ☐ Drive screws horizontally through the provided mounting holes into the sides of the cabinet.


*Note: Additional blocking may be required to provide proper support in these areas. Consult a professional installer if needed.*

### INS Models (Optional L-Bracket Installation)

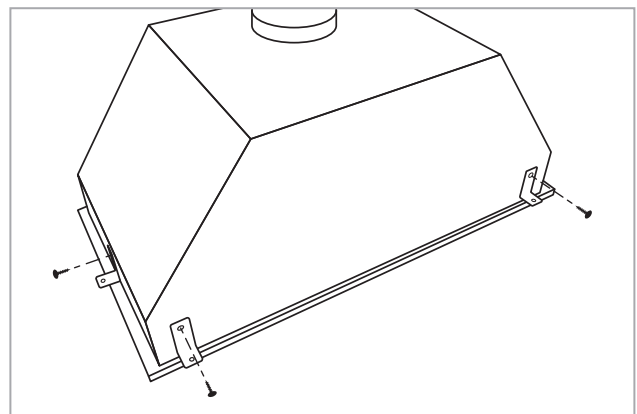

- ☐ These hoods may include L-brackets as optional hardware.
- ☐ Attach the brackets to the housing of the hood as shown in the diagram.
- ☐ Fasten screws vertically through the brackets into the underside of the cabinet base.

## Hurricane Inserts

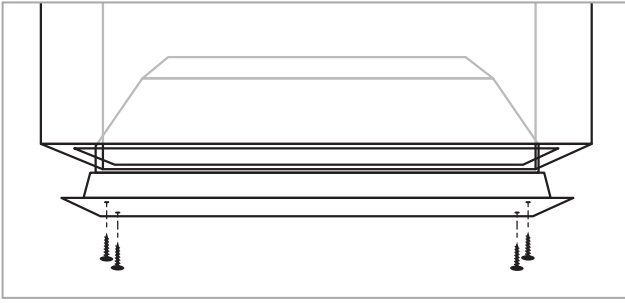


- ☐ Secure the hood by fastening through the front panel flange.
- ☐ Drive screws vertically through the flange into the underside of the cabinet.

**Confirm your cabinet construction is compatible with this method before installation**

### Step 3: Ductwork Connection


(For cabinets where ductwork was not connected in Step 1)

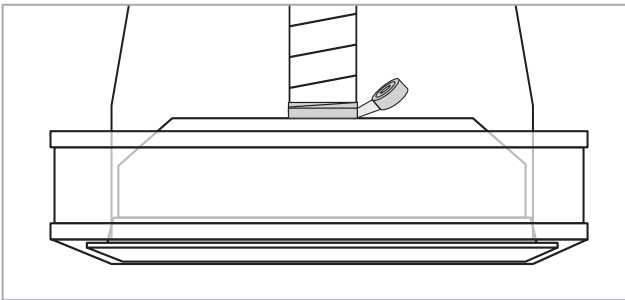

- ☐ Attach ductwork to the hood outlet or transition piece.
- ☐ Secure with screws as needed.
- ☐ Seal with aluminum HVAC tape for an airtight connection.

## Grease Tray Installation

**Note:** Grease trays are only included on models that use *handled* baffle filters.

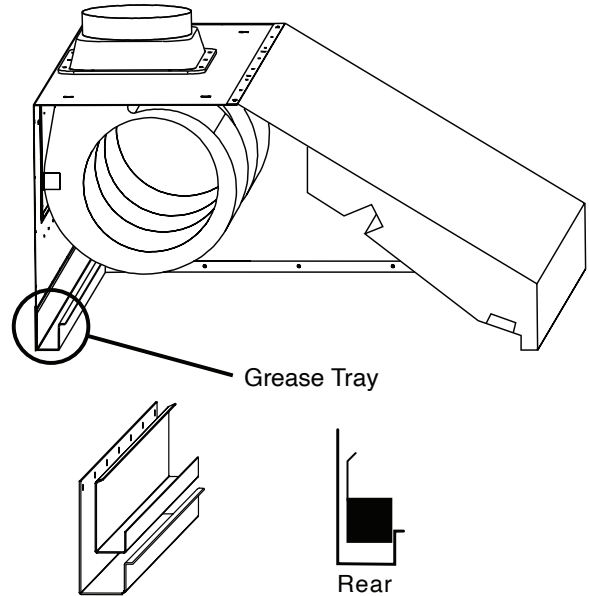

**Install the grease tray into the rear channel inside the hood (if applicable).**

- ☐ Slide the tray into the back tunnel channel until fully seated.
- ☐ Make sure it's level and secure — it will hold the baffle filters during final assembly.




## Baffle Filter Installation

**WARNING:** Baffle filter edges and channels may be sharp. Handle with care during installation or removal. Do not disassemble filters.


**Note:** The type of filter included with your hood depends on the model you purchased. Only install the filters provided with your hood.

### Baffle Filters with Handles

These models include grease trays. Refer to the *Grease Tray Installation* section before installing your filters. Attach the included stainless steel handles to each filter using the provided screws. **To install,** (1) tilt the filter so the rear edge enters inside the hood cavity, (2) lift the front into the front channel, (3) lower back of filter on to grease tray.

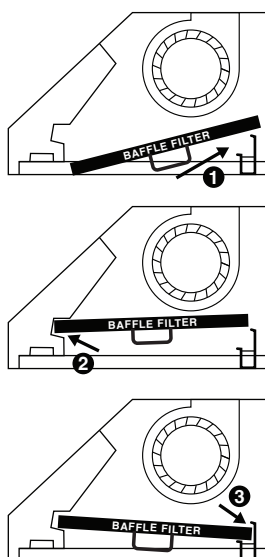

### Filter Installation (Knob-Handled & Latched Models)

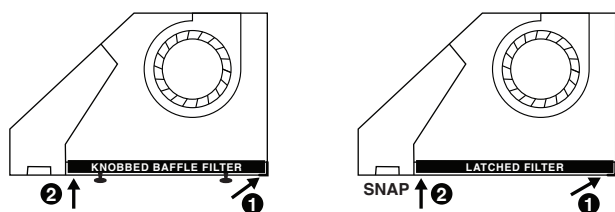

These models use a spring-loaded system to hold the filters in place. Depending on your hood, the spring action may be internal (latch) or external (knobs).

**To Install:** Insert the back of the filter into the rear channel, pressing it firmly against the spring mechanism.

Raise the front of the filter into position:

- **For knob-handled filters:** the spring will push the filter forward until it locks securely.
- **For latched filters:** push upward until you hear a click, or lift and release the latch to lock it in place.

## Final Steps

**Make a few final checks to ensure your installation is solid:**

- Confirm that the hood is level and properly aligned within the cabinet.
- Tighten any mounting screws as needed.
- For added support, you may install additional grabber or self-tapping screws through the hood's mounting flanges.

**That wraps up your wall range hood installation! Great work!**

We are happy to help you with any questions or concerns you may have. Please create a ticket, email us at [support@prolinerangehoods.com](mailto:support@prolinerangehoods.com) or call our support line at (801) 973-3959 to talk to a live representative.

## Maintenance

---

**Your hood is equipped with stainless steel filters that are dishwasher safe for easy cleaning. To remove the filters, reverse the installation process:**

**Baffle Filters with Handles:**

- Lift the back edge of the filter off the grease tray.
- Lower the front edge out of the channel, then tilt the filter down and out.

**Knob-Handled Filters:**

- Push the filter slightly toward the rear channel to release spring mechanism.
- Lower the front edge and pull the filter out.

**Latched Filters:**

- Release the latch or press the filter upward to disengage the lock.
- Lower the front edge and remove the filter from the hood.

**Handle with care. Filters and trays may have sharp edges. Avoid bending or forcing them during removal or cleaning.**

## Latest Installation Manual

---

**Stay Up to Date**

We're always improving our installation guides to make them clearer and more accurate. Scan the QR code below to access our online installation guide portal, where you'll find the most current instructions for your Proline hood. This ensures you have the latest tips, diagrams, and updates—even if changes were made after your manual was printed.







4375 W 1980 S, Salt Lake City, UT 84104

Call (801) 973-3959  
[support@prolinerangehoods.com](mailto:support@prolinerangehoods.com)  
[www.prolinerangehoods.com](http://www.prolinerangehoods.com)

Our Support team hours are:  
Mon-Fri 8:30 am – 5:00 pm MST

---